

# ZAP L-Series

POINT. CLICK. POWER.

### Features

- Easily controlled by the remote control from up to 100 feet in line-of-sight
- Separate on and off buttons on the remote control
- Can be switched on and off manually by pressing the programming button on the side of the outlet
- Programmable – program any outlet to any button
- Extra outlets and remotes can be purchased separately for easy expansion of the set
- Outlets will remain powered off after a power outage to save energy
- Power output up to 1200W at 120V (60Hz)
- Low power consumption, reduces energy use and extends product life by up to 15%

### Setup

- Install one 12V/23A battery in the remote control's battery compartment, making sure the polarity of the battery is correct.
- Plug each outlet switch into a socket and plug a device or appliance into each outlet.
- Press the on/off buttons for the respective channel on the remote control to operate the outlet switch.

### Programming the outlets

- Note: The outlets are pre-programmed for immediate use, but the configuration can be customized to meet your needs.

To program a remote control transmitter and outlet switch receiver:

- Plug the outlet switch into a socket and turn it on.
- Press and hold the programming button on the right side of the outlet until the LED indicator begins to flash.
- Release the programming button and then press the desired On or Off button on the remote.
- The pairing is successful when the LED indicator stops flashing.

### Resetting an outlet (cancel all pairings)

- To cancel all pairings so that no remote control will control it:
- Remove the outlet from the power socket.
  - Press and hold the programming button.
  - Plug the outlet back into the power socket while continuing to hold the programming button.
  - Hold the programming button for approximately 5 seconds until the LED indicator begins to flash.
  - When the LED flashes rapidly several times and stops, the outlet has been reset.

### Notes


- Regularly change the battery in the remote control for best performance. If you find the outlet switches are not responding or the LED indicator on the remote control becomes dim, the battery should be replaced. Always dispose of old batteries properly with consideration for the environment.
- Make sure the battery and outlets are installed firmly and correctly for safe operation.
- These outlet switches are for indoor use only. Avoid exposure to high temperature sources, strong sunlight, and moisture. The outlets are best used in areas with good air circulation.
- Do not exceed the maximum load current of 10A (approximately 1200W).
- Extra buttons on remotes can be used with additional outlets.

### Technical data

Voltage .....	120V~/60Hz
Max. power .....	1200W
Max. current .....	10A
Transmission frequency .....	433.92MHz
Remote battery .....	12V (23A)



CONFORMS TO UL STD NO.61058-1 AND 498A  
 CERTIFIED TO CSA STD.C22.2 NO. 61058-1 AND 42

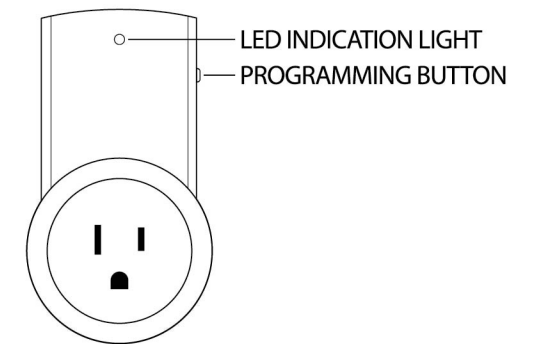

**ESSENTIALS** | ETEKCITY